

**Nikon DSLR Cameras**

Lensbaby Lens	D40	D3000	D5000					
	D40x D70s	D3100 D5100	D3200 D5200	D7000	D200 D300	D3/ D3x/ D3s	D600 D800	Df
	D50 D80	D3300 D5300	D3400 D5500	D7100	D300s	D4/ D4s	D610 D800e	
	D60 D90			D7200	D500	D5	D700 D810	
	D70 D100						D750 D810a	
Velvet 56 SE	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Velvet 56	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Circular Fisheye	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Trio 28	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Twist 60	Not Recommended	Not Recommended	Not Recommended	Not Recommended	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Composer Pro II with Sweet 35 Optic	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Composer Pro II with Sweet 50 Optic	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Composer Pro II with Edge 50 Optic	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Composer Pro II with Edge 80 Optic	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Spark	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
<b>Discontinued</b>								
Composer Pro with Sweet 35 Optic	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Composer Pro with Sweet 50 Optic	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Composer Pro with Edge 80 Optic	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Composer Pro with Double Glass Optic	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Muse	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Scout	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Composer	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Control Freak	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Composer with Tilt Transformer	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Tilt Transformer	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A

AP/ M = Camera will work in Aperture Priority Mode or Manual Mode and in-camera light meter will work

M = Camera will only work in Manual Mode and in-camera light meter will not work.