

Samsung NX Mirrorless Cameras

Lensbaby Lens	Galaxy NX NX Mini	NX10	NX100 NX210 NX300	NX300m NX310 NX500	NX1000 NX1100 NX2000 NX3000 NX3300	NX1
		NX11 NX20 NX30				
Velvet 56 SE	N/A	N/A	N/A	N/A	N/A	N/A
Velvet 56	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M
Circular Fisheye	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M
Trio 28	N/A	N/A	N/A	N/A	N/A	N/A
Twist 60	N/A	N/A	N/A	N/A	N/A	N/A
Composer Pro II with Sweet 35 Optic	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M
Composer Pro II with Sweet 50 Optic	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M
Composer Pro II with Edge 50 Optic	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M
Composer Pro II with Edge 80 Optic	N/A	N/A	N/A	N/A	N/A	N/A
Spark	N/A	N/A	N/A	N/A	N/A	N/A
Discontinued						
Composer Pro with Sweet 35 Optic	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M
Composer Pro with Sweet 50 Optic	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M
Composer Pro with Edge 80 Optic	N/A	N/A	N/A	N/A	N/A	N/A
Composer Pro with Double Glass Optic	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M
Muse	N/A	N/A	N/A	N/A	N/A	N/A
Scout	N/A	N/A	N/A	N/A	N/A	N/A
Composer	N/A	N/A	N/A	N/A	N/A	N/A
Control Freak	N/A	N/A	N/A	N/A	N/A	N/A
Composer with Tilt Transformer	N/A	N/A	N/A	N/A	N/A	N/A
Tilt Transformer	N/A	N/A	N/A	N/A	N/A	N/A

AP/ M = Camera will work in Aperture Priority Mode or Manual Mode and in-camera light meter will work

M = Camera will only work in Manual Mode and in-camera light meter will not work.