

**Sony Alpha A DSRL Cameras**

Lensbaby Lens	A390		A100		A330		A500		A58*		Dynax Series* Maxxum Series* xi Series* si Series* I Series*	RD-175
	A700*	A450	A560*	A200	A350	A550	A700	A33*	A65*			
	A850	A500	A560L*	A230	A380	A560	A850	A37*	A77*			
	A900	A550	A580L*	A290	A390	A580	A900	A35*	A77ii*			
	A580*	A580L*	A290	A390	A560	A850	A55*	A99*				
	A900	A550	A580L*	A300	A450	A580	A900	A57*	A99ii*			
Velvet 56 SE	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	
Velvet 56	Sony Alpha A - AP/ M	Sony Alpha A - AP/ M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	
Circular Fisheye	Sony Alpha A - AP/ M	Sony Alpha A - AP/ M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	
Trio 28	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	
Twist 60	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	
Composer Pro II with Sweet 35 Optic	Sony Alpha A - AP/ M	Sony Alpha A - AP/ M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	
Composer Pro II with Sweet 50 Optic	Sony Alpha A - AP/ M	Sony Alpha A - AP/ M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	
Composer Pro II with Edge 50 Optic	Sony Alpha A - AP/ M	Sony Alpha A - AP/ M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	
Composer Pro II with Edge 80 Optic	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	
Spark	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	
<b>Discontinued</b>												
Composer Pro with Sweet 35 Optic	Sony Alpha A - AP/ M	Sony Alpha A - AP/ M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	
Composer Pro with Sweet 50 Optic	Sony Alpha A - AP/ M	Sony Alpha A - AP/ M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	
Composer Pro with Edge 80 Optic	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	
Composer Pro with Double Glass Optic	Sony Alpha A - AP/ M	Sony Alpha A - AP/ M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	
Muse	Sony Alpha A - AP/ M	Sony Alpha A - AP/ M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	
Scout	Sony Alpha A - AP/ M	Sony Alpha A - AP/ M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	
Composer	Sony Alpha A - AP/ M	Sony Alpha A - AP/ M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	
Control Freak	Sony Alpha A - AP/ M	Sony Alpha A - AP/ M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	
Composer with Tilt Transformer	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	
Tilt Transformer	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	

AP/ M = Camera will work in Aperture Priority Mode or Manual Mode and in-camera light meter will work

M = Camera will only work in Manual Mode and in-camera light meter will not work.

\* These cameras have a shutter lock that will need to be turned off. To disable the shutter lock go to the Shooting Menu on your camera, select Shoot Without Lens and select enable.