

Sony Alpha A DSRL Cameras									
Lensbaby Lens	A100 A200 A230 A290 A300	A330 A350 A380 A390 A450	A500 A550 A560* A560L*	A580* A580L*	A700* A850 A900	A33* A37* A35* A55* A57*	A58* A65* A77* A77ii* A99* A99ii*	Dynax Series* Maxxum Series* xi Series* si Series* i Series*	RD-175
Burnside 35	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M
Velvet 56 SE	N/A		N/A		N/A	N/A		N/A	N/A
Velvet 56	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M
Velvet 85	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M
Circular Fisheye	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M
Trio 28	N/A		N/A		N/A	N/A		N/A	N/A
Twist 60	N/A		N/A		N/A	N/A		N/A	N/A
Composer Pro II with Sweet 35 Optic	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M
Composer Pro II with Sweet 50 Optic	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M
Composer Pro II with Sweet 80 Optic	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M
Composer Pro II with Edge 35 Optic	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M
Composer Pro II with Edge 50 Optic	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M
Sol 45	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M
Sol 22	N/A		N/A		N/A	N/A		N/A	N/A
Spark	N/A		N/A		N/A	N/A		N/A	N/A
Discontinued									
Composer Pro II with Edge 80 Optic	N/A		N/A		N/A	N/A		N/A	N/A
Composer Pro with Sweet 35 Optic	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M
Composer Pro with Sweet 50 Optic	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M
Composer Pro with Edge 80 Optic	N/A		N/A		N/A	N/A		N/A	N/A
Composer Pro with Double Glass Optic	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M
Muse	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M
Scout	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M
Composer	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M
Control Freak	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M		Sony Alpha A - AP/ M	Sony Alpha A - AP/ M
Composer with Tilt Transformer	N/A		N/A		N/A	N/A		N/A	N/A
Tilt Transformer	N/A		N/A		N/A	N/A		N/A	N/A

AP/ M = Camera will work in Aperture Priority Mode or Manual Mode and in-camera light meter will work.

M = Camera will only work in Manual Mode and in-camera light meter will not work.

These lenses are only available by special order. Please contact Customer Happiness.

* These cameras have a shutter lock that will need to be turned off. To disable the shutter lock go to the Shooting Menu on your camera, select Shoot Without Lens and select enable.