

Sony Alpha E Mirrorless Cameras					
Lensbaby Lens	NEX-3* NEX-3N* NEX-C3* NEX-F3* NEX-5*	NEX-5N* NEX-5R* NEX-5T* NEX-6* NEX-7*	A3000* A3500* A5000*	A5100* A6000* A6300* A6500*	A7* / A7 II* / A7 III* A7R* / A7R II* / A7R III* A7S* / A7S II* A9*
Burnside 35	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M
Velvet 56 SE	N/A	N/A	N/A	N/A	N/A
Velvet 56	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M
Velvet 85	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M
Circular Fisheye	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M
Trio 28	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M
Twist 60	Not Recommended	Not Recommended	Not Recommended	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M
Composer Pro II with Sweet 35 Optic	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M
Composer Pro II with Sweet 50 Optic	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M
Composer Pro II with Sweet 80 Optic	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M
Composer Pro II with Edge 35 Optic	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M
Composer Pro II with Edge 50 Optic	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M
Sol 45	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M
Sol 22	N/A	N/A	N/A	N/A	N/A
Spark	N/A	N/A	N/A	N/A	N/A
<b>Discontinued</b>					
Composer Pro II with Edge 80 Optic	N/A	N/A	N/A	N/A	N/A
Composer Pro with Sweet 35 Optic	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M
Composer Pro with Sweet 50 Optic	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M
Composer Pro with Edge 80 Optic	N/A	N/A	N/A	N/A	N/A
Composer Pro with Double Glass Optic	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M	Sony Alpha E - AP/ M
Muse	N/A	N/A	N/A	N/A	N/A
Scout	N/A	N/A	N/A	N/A	N/A
Composer	N/A	N/A	N/A	N/A	N/A
Control Freak	N/A	N/A	N/A	N/A	N/A
Composer with Tilt Transformer	Sony NEX - AP/ M	Sony NEX - AP/ M	Sony NEX - AP/ M	Sony NEX - AP/ M	Sony NEX - AP/ M
Tilt Transformer	Sony NEX - AP/ M	Sony NEX - AP/ M	Sony NEX - AP/ M	Sony NEX - AP/ M	Sony NEX - AP/ M

AP/ M = Camera will work in Aperture Priority Mode or Manual Mode and in-camera light meter will work  
M = Camera will only work in Manual Mode and in-camera light meter will not work.

\* These cameras have a shutter lock that will need to be turned off. To disable the shutter lock go to the Shooting Menu on your camera, select Shoot Without Lens and select enable.